


### TECHNICKÝ LIST /

# CL 806

## **Cleaning agents**

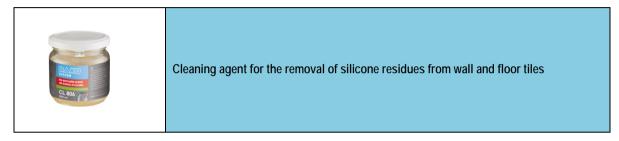

### APPLICATION:

This is a special product intended for the removal of residues of silicone jointing materials. The product must be applied undiluted in the delivered gel-like consistency.

COMPOSITION: Non-ionic surfactants, ethoxylated alcohols, and methadiene.

### **TECHNICAL PARAMETERS:**

| Ph value              | 4-7  |
|-----------------------|--|
| Physical form at 20°C | liquid   |
|                       |  |
| Approximate coverage: | approx. 20 ml of this product for 1 running metre of joint |

### PROCESSING:

Using a brush, apply the undiluted product into a joint to be cleaned, and leave it to act for a longer time. Then, using a plastic spatula, scrape the swollen silicone residues from the surface - perform this activity with sufficient pressure.

After mechanical cleaning, remove any residues from the joint by washing with water.

While handling the cleaning agent, the use of protective working equipment is recommended.

CAUTION:

- Before using this product, please read the instructions for use carefully, and follow the manufacturer's instructions.
- High temperatures with thermal decomposition may lead to the formation of toxic products
- Unused residues and contaminated containers should be disposed as of hazardous wastes (see the Safety Data Sheet). •

### FIRST AID:

In the event of health problems, or if in doubt, contact your doctor. If unconscious, place the victim in the recovery, side position with the head slightly tilted back and establish a clear airway. Never induce vomiting. If the victim vomits, take care to prevent aspiration of vomit. Remove the victim to fresh air and secure physical and mental rest. Do not let the victim get cold. If irritation persists, seek medical advice. May cause sensitization by skin contact. Take off immediately all contaminated clothing. Wash exposed parts of skin preferably with warm water and soap, or use a suitable cleaning agent. Never use thinners or solvents! If irritation persists, seek medical advice. After eye contact, rinse with clean water for at least 15 minutes, possibly with forcibly opened eye lids, and seek medical advice. If swallowed, keep the victim at rest. Rinse mouth with water (only if the victim is conscious); never induce vomiting. Do not drink water. Seek medical advice immediately and show the product container or label.

#### SAFETY AND HYGIENE REGULATIONS: Warning symbol: Xi irritant, N dangerous for the environment

- R 10 Flammable R 38
  - Irritating to skin. May cause sensitization by skin contact.
- R 43 R 50/53
- Very toxic to aquatic organisms, may cause long-term adverse effects in the aquatic environment. Keep out of the reach of children.
- S 2 S 24 Avoid contact with skin.
- S 37 Wear suitable gloves.
- If swallowed, seek medical advice immediately and show this container or label. S 46
- S 60 This material and its container must be disposed of as hazardous waste
- S 61 Avoid release to the environment. Refer to special instructions or safety data sheets.

| LASSELSBERGER, s.r.o.          | TEL    | +420 378 021 111 | BANK DETAILS: Česká spořitelna, a. s. |
|--------------------------------|--------|------------------|---------------------------------------|
| Adelova 2549/1                 | FAX    | +420 378 021 119 | 6221912/0800                          |
| 320 00 Plzeň - Jižní Předměstí | E-MAIL | info@rako.cz     | Company ID number 25238078            |
| Czech Republic                 | WEB    | www.rako.cz      | Tax ID number CZ25238078              |

## D SYSTEM

## TECHNICKÝ LIST /

### STORAGE:

- If the product is stored in dry, covered and clean warehouses, protected against atmospheric influences, at temperatures from + 10°C to + 25°C, the shelf life is 36 • months. The expiration date is specified on the packaging. Maximum permissible quantity of the product for the recommended storage conditions: 200000 kg.
- •

### SHIPPING:

200 ml polyethylene container.

### QUALITY:

- The product quality is regularly checked in the manufacturer's laboratories.
- The distributor applies a certified quality management system, according to ISO 9001.

#### DISTRIBUTOR:

LASSELSBERGER, s.r.o., Adelova 2549/1, 320 00 Pilsen - Jižní Předměstí

### VALIDITY:

Since 1 August 2013

We reserve the right to make any changes that are the result of technical progress. This issue cancels and supersedes all previous issues.

| LASSELSBERGER, s.r.o.          | TEL    | +420 378 021 111 |
|--------------------------------|--------|------------------|
| Adelova 2549/1                 | FAX    | +420 378 021 119 |
| 320 00 Plzeň - Jižní Předměstí | E-MAIL | info@rako.cz     |
| Czech Republic                 | WEB    | www.rako.cz      |

BANK DETAILS: Česká spořitelna, a. s. 6221912/0800 Company ID number 25238078 Tax ID number CZ25238078

The company is registered in the Companies Register, administered by the Regional Court in Plzeň, Section C, File 22719